

# 12v Twin Piston Air Compressor



## WARNINGS

Before using this unit please read these instructions carefully. Take special care to follow the warnings and safety suggestions listed below. Keep these instructions for future reference.

## INFLATING VEHICLE TYRES

1. Start the vehicle engine to achieve optimum compressor performance.
2. Connect the crocodile clips to the relevant battery terminal.
3. Turn the compressor ON to begin inflating the tyre.
4. When the pressure gauge reaches the desired pressure (as per your vehicle specification found in your manual), switch the unit OFF and remove the air hose from the valve.

## PRECAUTIONS

1. Allow sufficient cooling time before storing the unit.
2. All parts are lubricated for the life of the unit. No oiling is required. Please do not open the unit or tamper with it as this will void the warranty.
3. To avoid draining the vehicle battery please have the engine running while using the air compressor.
4. Please ensure that the power switch is in the OFF position if the unit is not in use.

## OTHER INFLATABLE OBJECTS

1. Start your vehicle's engine, then connect the compressor crocodile clips to the battery.
2. Nozzles are provided to fit most inflatable objects. Simply screw in the appropriate nozzle into the brass tip of the air hose.
3. Attach the appropriate nozzle to the inflatable object and turn the compressor on. When the object is inflated to desired firmness or pressure, turn the compressor off.

## SPECIFICATION

Input Voltage	12 Volts (13.8V Max)
Current	17 Amps (23A Max)
Max Pressure	150 PSI
Air Flow	65 L/pm
Noise	76dB
Motor r/pm	4200 r/pm
Motor Current	1.6A
Max Duty Cycle	40 Minutes (With thermal cutout protection)
Certificate	CE
Dimensions	Please see above
Weight	3.115 KG

