


Wet/Dry Vacuum Hoover

Instruction Manual

(Please read following instruction manual carefully before use)

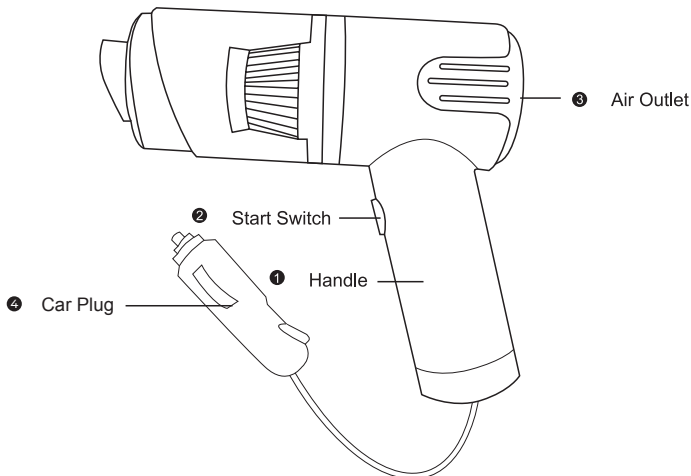

① Handle

③ Air Outlet

② Start Switch

④ Car Plug

Accessories



Functional
nozzles



Warnings:

1. Do not immerse the vacuum in water or other liquids;
2. To avoid fire, explosion, or injury, please check the vacuum cleaner and cable before use.
3. Do not operate the vacuum with wet hands.
4. Do not leave the vacuum cleaner turned on whilst unattended.
5. Keep the vacuum cleaner and cable away from heated surfaces.
6. Do not cover the air intake whilst in operation.
7. Do not vacuum combustible materials, such as cigarette ends, etc.
8. Do not let children operate the vacuum cleaner or play with it as a toy. Please also take care when children are near the running vacuum.
9. When the dust in the dust collection bin exceeds 50%, please empty it.

FAQ:

Vacuum cleaner does not work:

- Hepa filter is blocked and needs cleaning.

The vacuum cleaner cannot pick up debris or weak suction:

- Too much dust in the collection bin, needs emptying.

Guarantee Notes:

Under the guarantee, an end user can register their product at www.simply-brands.com/guarantee and be covered for a free replacement if any product within the 12-month period has any defects in material or workmanship, up to a period of 1 year, when used in non-commercial applications, subject to the terms of the guarantee. For full details please visit www.simply-brands.com/guarantee. This guarantee is provided in addition to, and it will not affect the consumer's statutory rights provided under, the Consumer Rights Act 2015.

