

Dear customer,

We are delighted that you have decided on this garden hose. Please read the instructions carefully before usage.

Proper use

- The article is intended for routine watering applications.
- The article is not intended for watering applications with hot water.
- Do not drink from the hose. The article is a tool that is used and stored outdoors and can be exposed to conditions that can be harmful to humans such as:
 - Mold and bacteria
 - Insects
 - Lawn and Garden chemicals
 - Stagnant water
 - Animal waste
 - Other harmful substances
- The article is not a toy! Keep children and animals away from the article. Do not leave the article unattended when children and animals are around. It is not suited for children and animals.
- The article is intended for domestic, not commercial use.
- Only use the article for the intended purpose and only as described in the instructions. Any other use is deemed improper.



Safety instructions

- Risk of suffocation! Keep the packaging material away from children and animals.
- Do not stretch or expand this hose when it is empty. The article is intended to expand only when the water is turned on. This hose can stretch to up to three times its “relaxed” or original length and if it is stretched with no water in it and accidentally released, it will quickly snap back and could cause personal injury.
- Do not leave the water turned on with the hose under pressure when not in use.
- Store the article in a sun-protected location.
- Protect your hose from harsh winter weather by storing it indoors.
- Be sure to drain the hose completely before storage as water remaining in the hose can freeze, damaging the hose.

Warranty conditions

Defects arising due to improper handling, damage or attempts at repair are excluded from the warranty. This also applies to normal wear and tear.

Use

Expandable hose with valve

Before you start using the expandable hose, ensure to firmly affix the rubber inside (already installed) to the female coupling to prevent leaking.

Append the female end of the expandable hose to the water source.

Turn the ON / OFF valve off.

Turn the water on at the source. Gradually increase the water pressure. The hose will automatically expand up to 3 times its original length.

When the hose is fully expanded, turn the ON / OFF valve to the on position, and use the hose like any ordinary garden hose. Note: When used without a spray nozzle, the hose will contract several feet or more when the water is turned on.

After use, turn the water off at the water source.

Open the ON / OFF valve and allow the water in the hose to drain. If you are using a nozzle then open the nozzle. As the water begins to drain from the hose, it will automatically contract back.

Expandable hose with quick connector

Attach the tap connector to the water supply.

Attach the spray nozzle to the second quick connector at the other end of the hose.

Turn the water on at the source. Gradually increase the water pressure. The hose will automatically expand up to 3 times its original length.

When the hose is fully expanded use it like any ordinary garden hose.

After use, turn the water off at the water source.

As the water begins to drain from the hose, it will automatically contract back.

Disposal



The packaging can be recycled. Please dispose of it in an environmentally friendly manner and take it to a recycling centre. Dispose of the article in an environmentally friendly manner too. You can obtain more information from your local authorities.

Simply Brands

www.simply-brands.com

Importer Name:
Simply Brands (Asia) Ltd

Importer Address:
Unit 04-05, 16th Floor, The Broadway No. 54-62
Lockhart Road, Wanchai, Hong Kong