

Simply Brands

Smart Microphone

Instruction Manual



Thank you for purchasing our product

Please read these instructions carefully before use and keep for future reference

Important Safeguards

When using this product and to enjoy optimum performance, these basic safety precautions should be followed:

- ⚠ The lightning sign is intended to alert you to be careful of electronic leakage.
- ⚠ The exclamation mark indicates the product shall be operated according to the manual.
- ⚠ This product can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they've been given supervision concerning its use.
- ⚠ Cleaning and user maintenance should not be made by children.
- ⚠ Ensure the appliance is switched off after use and before cleaning or maintenance.
- ⚠ Do not immerse the appliance in water or any other liquids.
- ⚠ Do not allow the appliance to touch any flammable material during use (such as curtains or wall coverings) and keep away from high temperatures.
- ⚠ To prevent electric shock, do not expose this product to rain or moisture.
- ⚠ Do not store the product in a humid or dusty place.
- ⚠ Do not remove the cover as the internal voltage may cause damage to your body.
- ⚠ In the event of malfunction, please contact the maintenance service agent.
- ⚠ Do not disassemble the product.


Environment Friendly Use Period

The environment friendly use period for this electronic information is 10 years.


During which no pollution to the environment or serious damage to health or property will be caused by the leakage of harmful substances, provided it's operated in accordance with this manual.





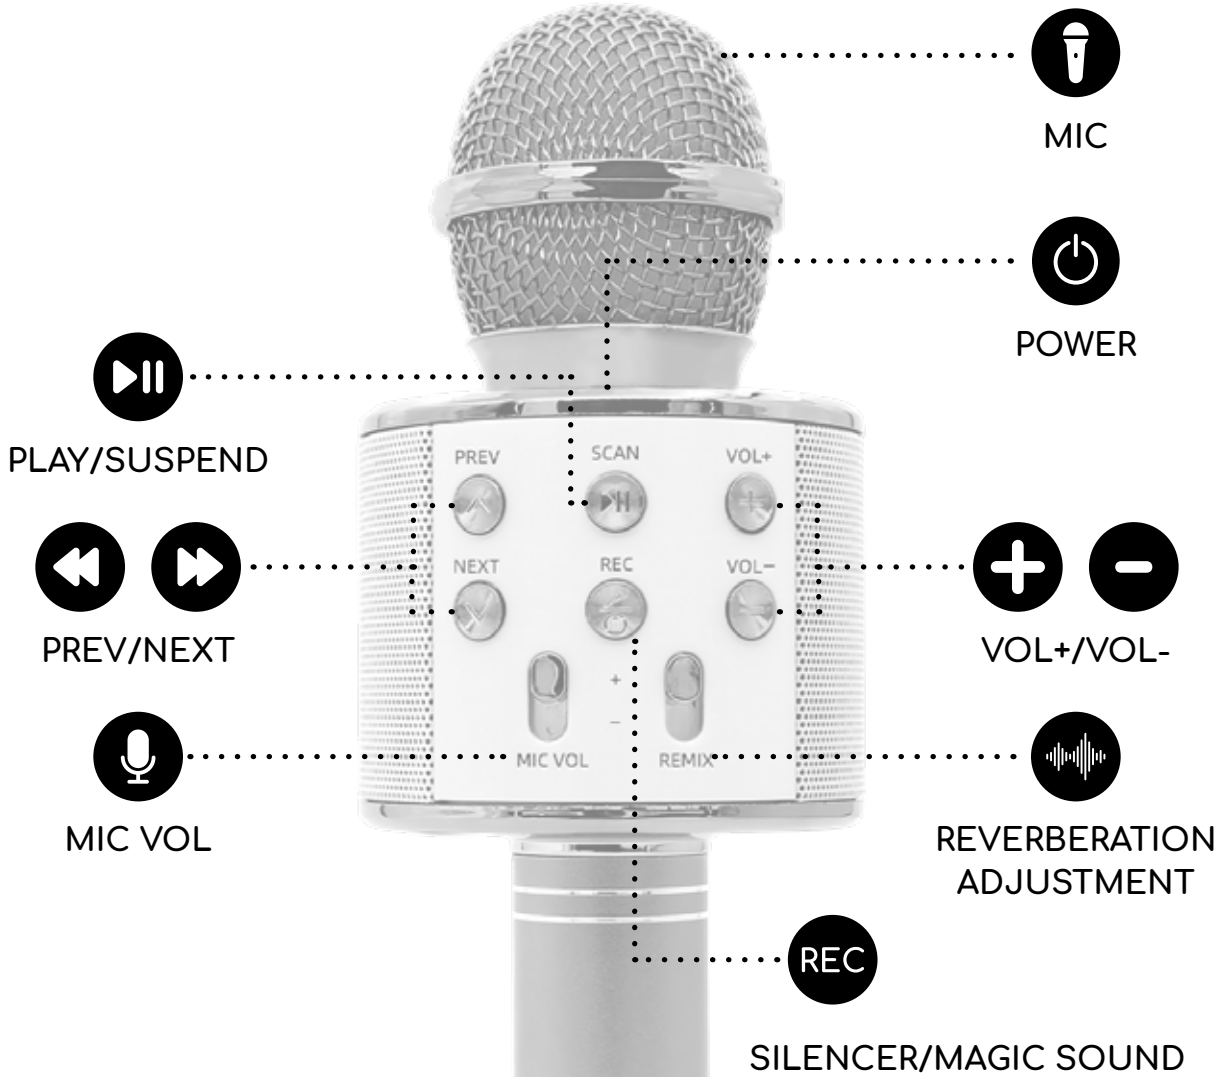



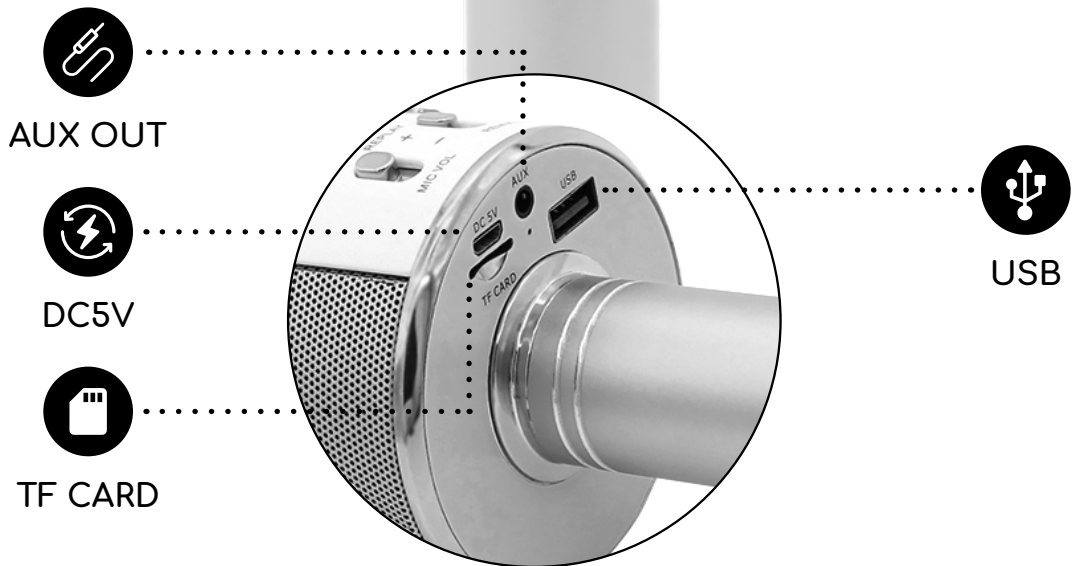


Product Features



Structural Representation



Button Operation

-  **POWER**
 1. Long press the button to turn on / off.
 2. Short press the button to switch the mode.
-  **PREV** Short press the button to switch to the previous song.
-  **NEXT** Short press the button to switch to the next song.
-  **SCAN**
 1. Short press the button to pause / play song / accompaniment.
 2. Selfie function.
-  **REC**
 1. Short press the button to turn on / off the microphone's one-button mute mode.
 2. In the "TF CARD" mode, long press the button change to the loop function.
 3. Long press the button to turn on (hear *DI* sound) or exit (hear *DIDI* sound) the magic sound function.
 4. In the magic sound mode, short press the button (hear *DI* sound) to switch the magic sound effect.
-  **VOL+** Add song / accompaniment volume.
-  **VOL-** Decrease song / accompaniment volume.
-  **MIC VOL** Adjust the microphone volume.
-  **REMIX** Adjust the microphone reverb voice.



Wireless Karaoke

1. **Turn on the power:** Long press the "POWER" button to turn on.
2. **Bluetooth connection:** Turn on the bluetooth of the mobile phone, and click to pair and connect the product to your phone. A prompt tone indicates that the connection has been successful.
3. **Adjust the human voice:** Adjust the microphone human voice volume and reverb intensity to a suitable position.
4. **Start karaoke.**

Song Recording



1. **Connect the recording cable:** Insert the MICRO head in the interface and the 3.5mm connector of the recording cable into the earphone hole of the mobile phone.
2. **Open the K song software** in your phone or other song recording app then select your favourite song and start recording songs as described above.
3. **Debug and keep the song:** Just follow the instructions of the K song software.

Selfie Function

1. Short press the “POWER” button to switch to bluetooth mode.
2. Turn on the mobile phone’s bluetooth and search for “US-858” then click “CONNECT”.
3. Open the self-portrait interface on the mobile phone and press the “SCAN” button to take a picture.



Function Description



- **DC5V interface:** Charging interface.
- **Cable audio input:** Independent stereo function Cable audio record.
- **USB interface:** Supports MP3 file reading in flash disk.
- **AUX interface:** 3.5mm audio output.
- **TF CARD port:** Supports reading MP3 files from “TF CARD”.

Common Problems

Problem	Answer
1) Fails to turn on:	<ul style="list-style-type: none">• Check for battery status or try again after charging.
2) Makes noise during use:	<ul style="list-style-type: none">• Check for battery status or try again after charging.• Open the grille and check whether the sensor has come into contact with the grille. If it has, lower the sensor.
3) No sound:	<ul style="list-style-type: none">• Check whether "MIC VOL" and "VOL" push buttons are turned on.
4) No reverberation:	<ul style="list-style-type: none">• Check whether "REVERBERATION ADJUSTMENT" push button is turned on.
5) Microphone squeal:	<ul style="list-style-type: none">• Keep the loudspeaker away from other objects during use of the microphone.• The high sensitivity of the microphone may make it squeal slightly when you're holding onto the grille but it's normal if there is no abnormal sound when singing or MCing.
6) No device is found:	<ul style="list-style-type: none">• Check for connection of TF CARD or USB drive. Pull it out or switch mode and try again.
7) Music stutters when connecting through bluetooth:	<ul style="list-style-type: none">• Move your device, and remove current and magnetic field interface.
8) No sound or volume:	<ul style="list-style-type: none">• Check whether "VOL" push button is turned on.• Press and hold the "NEXT" button to increase volume.
9) Fails to read TF CARD/USB drive:	<ul style="list-style-type: none">• Make sure TF CARD/USB drive is intact and that MP3 files are saved in the TF CARD/USB drive.
10) Fails to charge or there's no cable audio input:	<ul style="list-style-type: none">• Replace charger or USB cable. Do not use incompatible charging device.

Product Specification

Product name: Karaoke microphone	Bluetooth version: 4.2
Charging voltage: DC5V	Sound track: Single track
Working voltage: 3.6-4.2V	Supporting devices: Cellphone, PC (cable independent stereo)
Power supply mode: Rechargeable lithium batteries	Output sensitivitt: 400mV
Battery capacity: 1200mAH	Resolution: ≥90DB
Charging interface: miniUSB	SNR: ≥80DB
Output power: 5W	Frequency range: 100HZ-10KHZ
USB: USB2.0	

Attachment

Android system requires version 4.2.2 or higher. iOS requires version 6.0 or higher.

Other versions are not supported at this time. Mobile phones with independent camera physical buttons are generally not supported.





Simply Brands

www.simply-brands.com

Importer Name:

Simply Brands (Asia) Ltd

Importer Address:

Unit 04-05, 16th Floor, The Broadway No. 54-62
Lockhart Road, Wanchai, Hong Kong