

Simply Brands

PROJECTOR

USER GUIDE



Due to continuous improvement, actual product may differ from the manual.
Manual is for reference only.

1. Safety notice

- 1.1** Please read the user manual carefully before using the projector.
- 1.2** A national standard power and power cord is suggested to ensure a stable power supply.
- 1.3** Please use the same power voltage as marked on the projector.
- 1.4** Please do not open the projector as this will void the warranty.
- 1.5** Do not look directly into the projector lamping. Doing so may cause damage to your eyes.
- 1.6** Do not cover the ventilation holes with any materials.
- 1.7** The projector is not weatherproof.
- 1.8** Always turn the projector off when not in use.
- 1.9** If you need to transport the projector, use the original foam provided to protect the projector. You may use other anti-shock material if this has been disposed of.
- 1.10** In order to extend the projectors life span and protect your eyesight, we recommend you have a break every 3-4 hours.

Maintain Indication:

You have a 1-year warranty from factory. For more warranty information, please contact the agency (warranty service is not including the frame, manual, package and some subjective idea about the video sound image aspects).

2. Preparation before turning on

2.1 Follow the below picture to connect the power adaptor.



2.2 The indicator light will illuminate once the power is connected.



3. Power On/Off

Press "⏻" on the projector or the remote to turn the power on/off.



4. Remote control introduction



5. User interface

After the projector is powered on, the following image will appear. After 2-3 seconds the picture will start to flash.



 
6. Focus

Place the projector vertically in front of the projection screen. Adjust the keystone wheel until you get a clear picture (square pixels will appear). You can display the menu to check the focus and make adjustments as necessary.



7. Connection

 
7.1 Please follow the below diagrams, depending on your connection preferences.

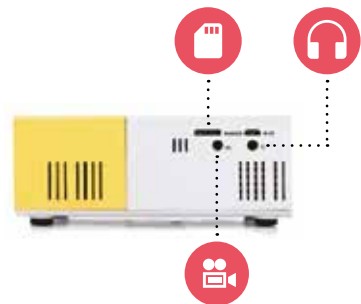


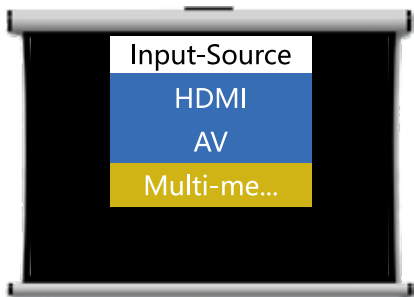 


7.2 See above for multimedia connection.

7.2.1 Insert USB/SD card in the ports shown.

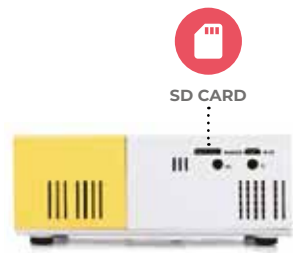

7.2.2 Choose the multi-media signal source. Press "  " on the remote or the projector to choose the relevant channel.



Multi-media supported formats

Multi-media	Audio support	MP3/WMA/OGG/ AAC/FLAC/APE/ WAV
	Photo support	JPEG/BMP/PNG
	Video support	3GP/AVI/MKV/FLV/ MOV/MP4/MPG/ VOB/MPG/RMVB/ RM
	Text support	TXT

7.2.3 Choose the content you wish to display: Movie, Music, Photo, Text.

 


7.2.4 Choose the file that you wish to display. You can press "▶|I" to display the file and to stop displaying the file.



7.3 AV/Video equipment connection

Use the 3 in 1 video convert cable to connect to the projector via the AV slot as shown in the below image. If using this method, please select 'Video' as the signal source.

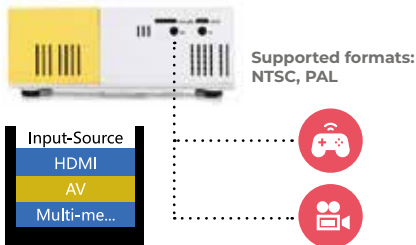

7.4 HDMI connection

You can connect a computer via the HDMI slot. If using this method, please select 'HDMI' as the signal source.



Supported files:

576P, 480P, 720P, 1080P, 640x480, 800x600, 1024x768, 1280x1024, 1280x720, 1440x900, 1920x1080, 1366x768, 1280x800, 1440x960, 1600x1200, 1680x1050.

7.5 3.5mm Audio device connection

You can use a 3.5mm earphone or speaker connection as shown in the picture below.



NOTICE: Dolby copyright. This product does not support Dolby related decode.

8. Menu guide

8.1 Menu layout

8.1.1 Please see an image of the main menu below. You can get to the main menu by pressing "≡" on the remote. Press "◀/▶" to enter the sub menus. Press "▼/▲" to select the program you wish to adjust. Press 'OK' to confirm your selection. You can see the different menu options in the image.



These are 'Image Mode (standard, soft, user, dynamic)', 'Colour Temperature (cold, hot, user, standard)', 'Aspect Ratio (auto, 4:3, 16:9, point-to-point, panoramic, zoom1, zoom2, just scan)', 'Noise Reduction (close, low, medium, high, tacitly approve)'.

8.1.2 Audio sub menu

Press "≡" for the main menu. Press "◀/▶" and select the audio sub menu then press "▼/▲" to choose the item you need to adjust. Press 'OK' to confirm your selection.

In the audio menu you can choose your sound mode (music, movie, sport, user, balance (-50 – 50+), auto volume (open, off), surround (close, surround, SRS)).



8.1.3 Time sub menu

Press "≡" for the main menu. Press "◀/▶" and select the time sub menu. Press "▼/▲" to choose the item you wish to adjust. Press 'OK' to confirm your selection.

In this menu, you can set the time back to factory settings.



8.1.4 Set-up sub menu

Press "☰" for the main menu. Press "◀/▶" and select the set-up sub menu. Press "▼/▲" to choose the item you wish to adjust. Press 'OK' to confirm your selection.

You can set the language back to factory settings in the set-up menu.

8.2 Display menu

You can control the content via the display menu.




9. Power supply by power bank

Connect the power bank 5V/2A to the projector via the projector's micro USB port. The power bank must support YG300 power supply and have a 5V/2A outlet.



10. Technology features

Imaging Technology	TFT LCD	
Contrast	800:1	
Native Resolution	320x240 pixels	
Support Resolution	1920x1080 pixels	
Light	LED	
LED Life Time	30,000 hours	
Operation Mode	Manual Operation	
Projection Distance	1.5-2M	
Projection Size	24-60"	
Projector Ratio	1.6:1	
Aspect Ratio	4:3	
Color	16.7M	
Power Supply	 Standard	Adaptor: 12V-2A
		Mobile Power: 5V-2A
Consumption	10W-24W	
System Support	Multi-media (music, Picture, Video, TXT)	
Language Support	23 Languages	
Unit Size	126.4x85.8x47.7mm	



Simply Brands

www.simply-brands.com

Importer Name:

Simply Brands (Asia) Ltd

Importer Address:

Unit 04-05, 16th Floor, The Broadway No. 54-62
Lockhart Road, Wanchai, Hong Kong

