



**Step 1:** locate the screws underneath the control plate. Unscrew these screws.



**Step 2:** locate the screw near the wheel either side. Unscrew this screw on both sides as shown below.

